



**SEAT & FRAMING PLAN**

1/4" = 1'-0"  
 15 NET SEATS @ 18" PER SEAT

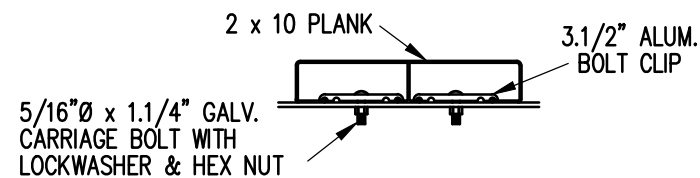

**BOLT CLIP DETAIL**

1.1/2" = 1'-0"

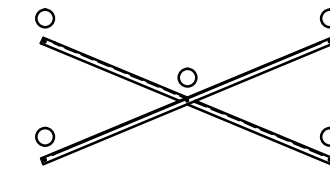

**X-BRACE DETAIL**

N.T.S.

○ 7/16" X 1" GALV. MACH. BOLT





FIG.1

FIG.2

- 1) LOCATE THE CHANNEL END CAP AS SHOWN IN FIG. 1.
- 2) TAP END CAP INTO PLACE WITH RUBBER Mallet OR SOFT WOOD. FIG.2
- 3) DRILL 5/32" HOLES THROUGH THE BOTTOM FLANGE AND THE BOTTOM OUTSIDE PLANK FLANGES OF EACH PLANK. INSTALL 5/32" POP RIVETS.

**END CAP DETAIL**

N.T.S.

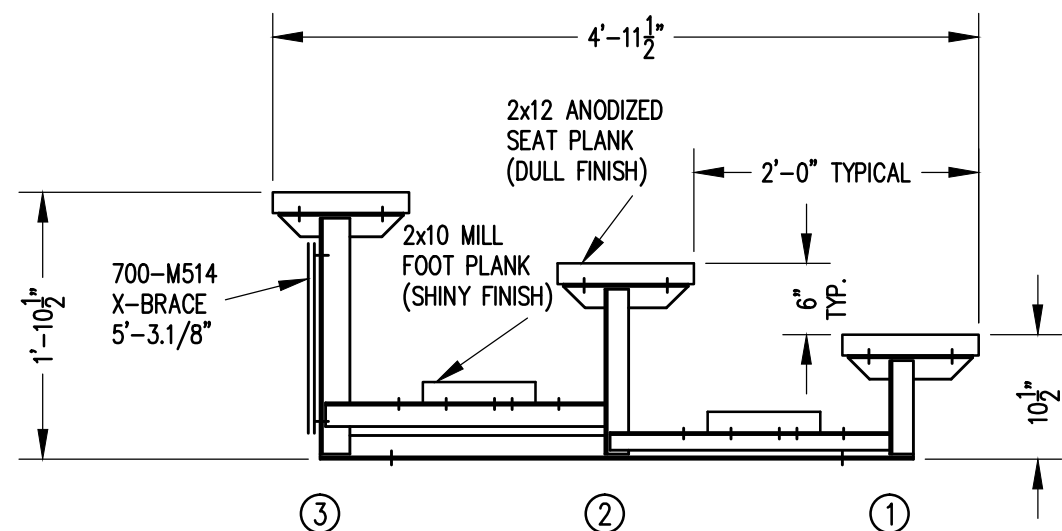

**SECTION AA**

3/4" = 1'-0"

		P.O. BOX 118 GENEVA, ALABAMA 36340 334-684-2296		
		SCALE AS NOTED	REVISIONS	BY
DATE 12/3/08	UPDATED TO 700 SERIES STANDARDS		GDK	02/13
DR'N JAW CKD				
AP'VD				
TITLE			NO.	
LSG 3-7.5 SEATING/FRAMING PLAN			564-E1041	